

FITMENT INSTRUCTIONS













FORD RANGER (T6) & Mazda BT-50 (2011-2021)

DOUBLE-&-EXTENDED CAB

XTREME, XPEDITION & RHINOLITE

FITMENT KIT CONTENTS

DESCRIPTION	QUANTITY	ILLUSTRATION
• M5x20 Hexagonal Bolt	2	
• M8x30 Hexagonal Bolt	20	
• M8 Nylock Nut	8	
• M8 Body Washer	28	
• Cab Side Bracket LH	1	
• Cab Side Bracket RH	1	
• Cab Side M5 Washer	2	
• Tail Gate Bracket LH	1	
• Tail Gate Bracket RH	1	
• Tail Gate Bracket Link	2	

REQUIRED TOOLS

DESCRIPTION	ILLUSTRATION
• 8mm Spanner	
• 8mm Socket Wrench (Optional)	
• 13mm Spanner	
• 13mm Socket Wrench (Optional)	

INSTALLATION TIME & CARE INSTRUCTIONS

Approx. 45 Minutes (Excluding the removal of any accessories from load bin)

- ✓ Before installation, ensure that your hands and workwear are clean from oil, grime & dirt.
- ✓ Ensure that the correct tools and PPE are used whilst installing the canopy. Clean the rear cab window before fitting the canopy.
- ✓ Torque all M5 fasteners to approx. 7Nm.
- ✓ Torque all M8 fasteners to approx. 28Nm.

FITMENT STEPS

STEP 1


- ✓ Unpack all components and hardware from packaging; ensure that everything is accounted for as indicated above.

STEP 2

- ✓ Remove any cab guards, roll bar, tonneau cover, sports bar etc. from vehicle.

STEP 3

- ✓ Remove the factory fitted tie-down hooks, located as shown in Fig. 1
- ✓ Place each fitment bracket to align with the tie-down point holes and the top surface of the fitment bracket protruding the load bin edge by $\pm 8\text{mm}$.
- ✓ Secure each fitment bracket with the provided bolts to the OEM tie-down points.
- ✓ Ensure that the rear cab window of the vehicle is clean, before loading the canopy onto the load bin.

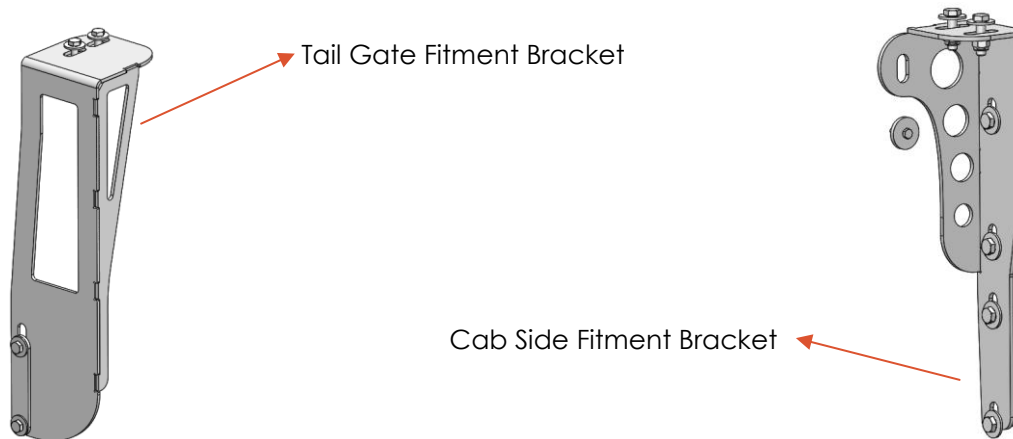

STEP 4

- ✓ Fit the canopy to the loading bin, align & space evenly.
- ✓ Line-up the canopy fastening points with the brackets' fastening points. (Fig. 1).
- ✓ When the canopy is resting on the load bin, adjust the brackets to achieve a gap of approx. 6mm between the canopy fastening surface and the bracket top surface. (Fig2.)
- ✓ Secure the brackets to the load body by fastening the bolts slowly & securely.
- ✓ Secure the canopy to the brackets using the bolts supplied, tighten the bolts to secure the two surfaces firmly, into the factory supplied threaded holes.

FIG 1.


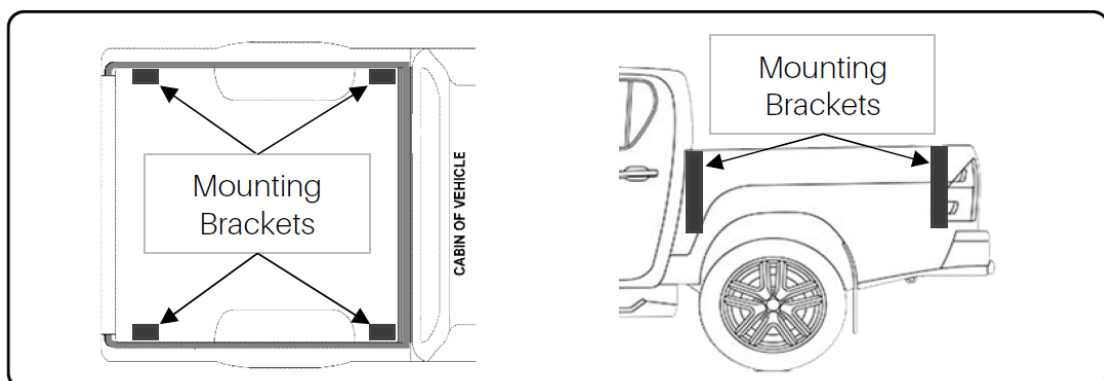


FIG 2.

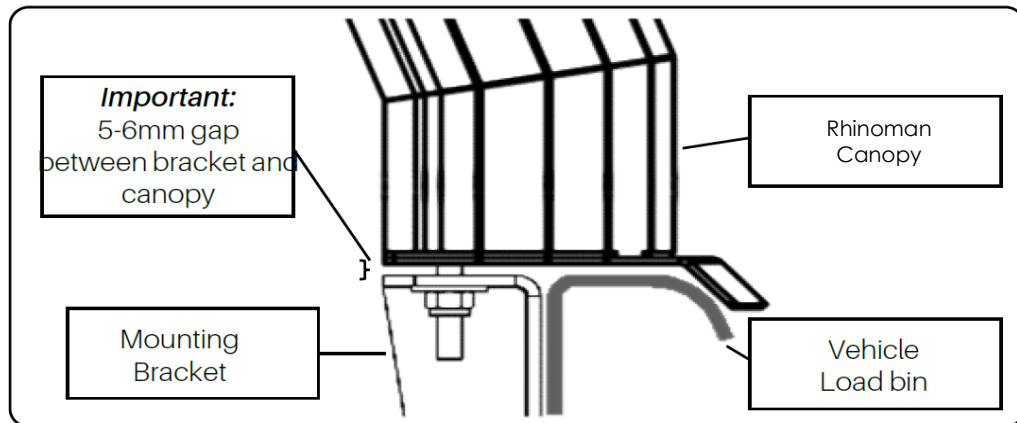

STEP 5

- ✓ Trim sealing rubber on tailgate with knife or scissors.
- ✓ Check again for alignment of canopy on sides of loading bin.
- ✓ Check all bolts one final time.
- ✓ Enjoy your NEW Rhinoman all Aluminum Canopy.

WARRANTY SERVICE & CARE GUIDE

- ✓ All Rhinoman products carry a comprehensive 2-year factory warranty.
- ✓ **PLEASE NOTE:** Your canopy will only be covered under warranty if it has been fitted by an approved Rhinoman fitment center or agent.
- ✓ Please do inspect the fasteners on the fitment brackets every once in a while, to ensure that all bolts are still tight and properly secured.

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US



010 010 0060



SALES@RHINOMAN.CO.ZA



RHINOMAN.CO.ZA