

FITMENT INSTRUCTIONS



ISUZU D-MAX (GEN 6 & 7)

DOUBLE-&-EXTENDED CAB

XTREME, XPEDITION, RHINOLITE & LX

FITMENT KIT CONTENTS

| DESCRIPTION | QUANTITY | ILLUSTRATION |
|------------------------|----------|--------------|
| • M8 x 30 Bolt | 12 | |
| • M8 Nylock Nut | 4 | |
| • M8 Flat Washer | 16 | |
| • M8 Spring Washer | 8 | |
| • Cab Side Bracket LH | 1 | |
| • Cab Side Bracket RH | 1 | |
| • Tail Gate Bracket LH | 1 | |
| • Tail Gate Bracket RH | 1 | |

REQUIRED TOOLS

| DESCRIPTION | ILLUSTRATION |
|---|--------------|
| <ul style="list-style-type: none"> • 13mm Spanner • 13mm Socket Wrench (Optional) • Drill • 9mm Drill bit | |

INSTALLATION TIME & CARE INSTRUCTIONS

Approx. 45 Minutes (Excluding the removal of any accessories from load bin)

- ✓ Before installation, ensure that your hands and workwear are clean from oil, grime & dirt.
- ✓ Ensure that the correct tools and PPE are used whilst installing the canopy. Clean the rear cab window before fitting the canopy.
- ✓ Torque all M8 fasteners to approx. 28Nm.

FITMENT STEPS

STEP 1

- ✓ Unpack all components and hardware from packaging. Ensure that everything is accounted for as indicated above.


STEP 2

- ✓ Remove any cab guards, roll bar, tonneau cover, sports bar etc. from vehicle.

STEP 3

- ✓ Remove the factory fitted tie-down hooks.
- ✓ Insert & align the cab side brackets with the front tie down fastening points.

- ✓ Insert & align the tail gate side brackets with the rear tie down fastening points.
- ✓ Ensure that the rear cab window of the vehicle is clean, before loading the canopy onto the load bin.

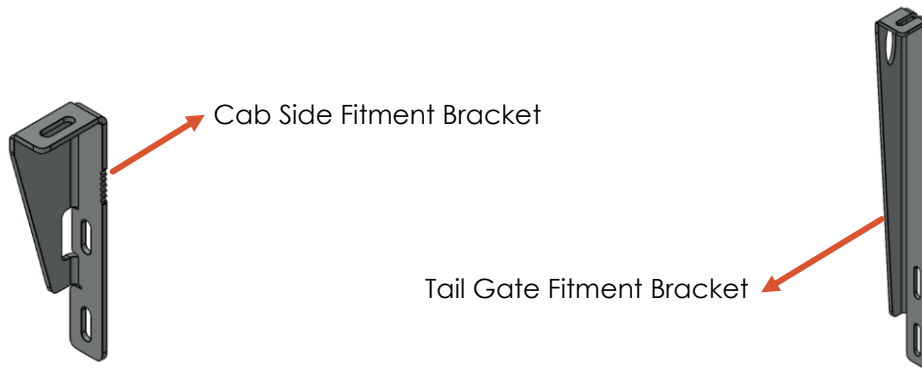

STEP 4

- ✓ Fit & align the canopy center to the vehicle load box, with a minimum distance of 25mm between the canopy front panel and vehicle cabin. (Fig. 1).
- ✓ When the canopy is resting on the load bin, adjust the brackets to achieve a gap of approx. 6mm between the canopy fastening surface and the bracket top surface. (Fig2.)
- ✓ Once the canopy is aligned and in place, use a black marker to mark the hole positions of the fitment brackets. Once all 4 x corners are marked, drill a $\varnothing 9\text{mm}$ hole into the side trim through the vehicle load box. (XP canopies will be pre-drilled).
- ✓ Secure the brackets to the load body by fastening the bolts slowly & securely.
- ✓ Secure the canopy to the brackets using the bolts supplied, tighten the bolts to secure the two surfaces firmly.

FIG 1.


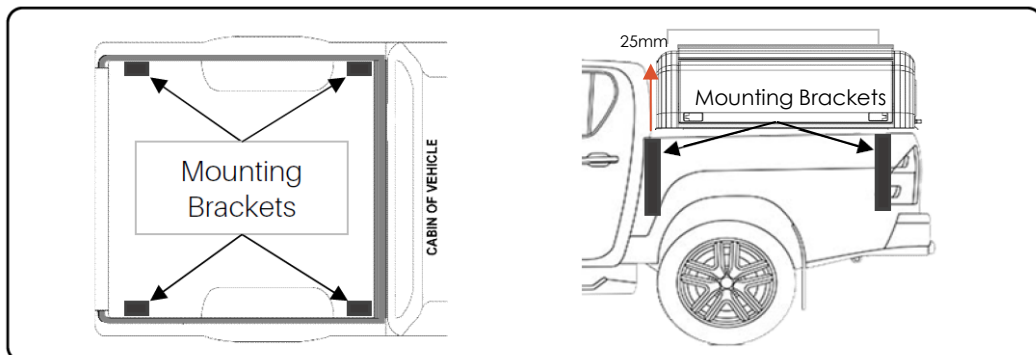


FIG 2.



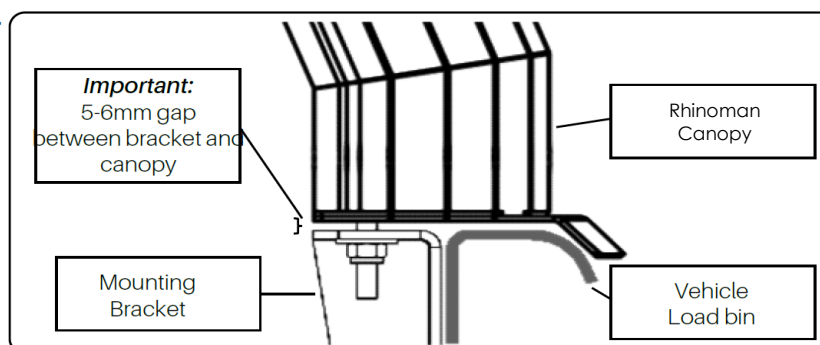

STEP 5

- ✓ Trim sealing rubber on tailgate with knife or scissors.
- ✓ Check again for alignment of canopy on sides of loading bin.
- ✓ Check all bolts one final time.
- ✓ Enjoy your NEW Rhinoman all Aluminum Canopy.

WARRANTY SERVICE & CARE GUIDE

- ✓ All Rhinoman products carry a comprehensive 2-year factory warranty.
- ✓ **PLEASE NOTE:** Your canopy will only be covered under warranty if it has been fitted by an approved Rhinoman fitment center or agent.
- ✓ Please do inspect the fasteners on the fitment brackets every once in a while, to ensure that all bolts are still tight and properly secured.

SHOULD YOU HAVE ANY ENQUIRIES ABOUT THE FITMENT, FEEL FREE TO CONTACT US



010 010 0060



SALES@RHINOMAN.CO.ZA



RHINOMAN.CO.ZA